

RY2045 Secondary Pin

How to replace on your RY2000 Punch Machine

- 1 Remove the RY2047 Escapement Cover Plate
- 2 Remove the RY2048 Index Pin
- 3 Turn the machine so it's standing up on the end, giving you a clear view of the machine's underside. Find the hole where the pin goes, through the end of RY2054 Drive Shaft.
- 4 Take your new RY2045 pin and push it into the hole, pushing the existing/old pin out. Make sure the pin is flush on the RY2054 Drive Shaft.
- 5 Replace the RY2048 Index Pin and then the RY2047 Escapement cover when done.

